LED Bulb Instruction

Warning: Please read this specification before installation!

About product:

Our high light efficiency bulb using modern high-tech forging technology, built-in the efficient isolation without electrolytic capacitor long life drive power, air-cooled design with a patented, high luminous flux maintenance rate and low wear and tear the whole lamp life of 30,000 hours, and can be completely replacing the high-power energy-saving lamps and mining lamp!

Application:

- workshop and warehouse lighting
- public lighting(airport,train station etc)
- garage lighting (4S shop)
- large-scale heavy industrial workshop lighting (steel mills, automobile factory, ship factory etc)
- outdoor street lighting
- Vertical high pole lighting.

Specifications:

Input voltage: 100-277V/AC (50-60HZ)

Power: 100W

C C T: 3000K/4000K/5000K/5700K C R I: Ra>80 Angle: 120° Base: E39 Weight: 946g

Warranty: 2 years Size: ∅125.5 X 253 mm Operating temperature: −20° C - 40° C

※ Note

- 1. Make sure the power off before installation.
- 2. Make sure the bulb working within right voltage range.
- 3. Please do not take apart the fixture.
- 4. Pls make sure if there is the high pressure starter in the old fixture before replacement. If so, pls follow the steps showed on picture B . If not, pls follow the steps showed on picture A







